


**FOR CONCRETE SLABS THICKER THAN 20 CM,
WE RECOMMEND PLACING SHOES EVERY 50 CM**

ADVICES TO SET "CROC" SHOES AND SPREADERS UP

Place shoes every 60 cm. To use the "CROC" formwork clamps properly, you need to respect the following setting up :

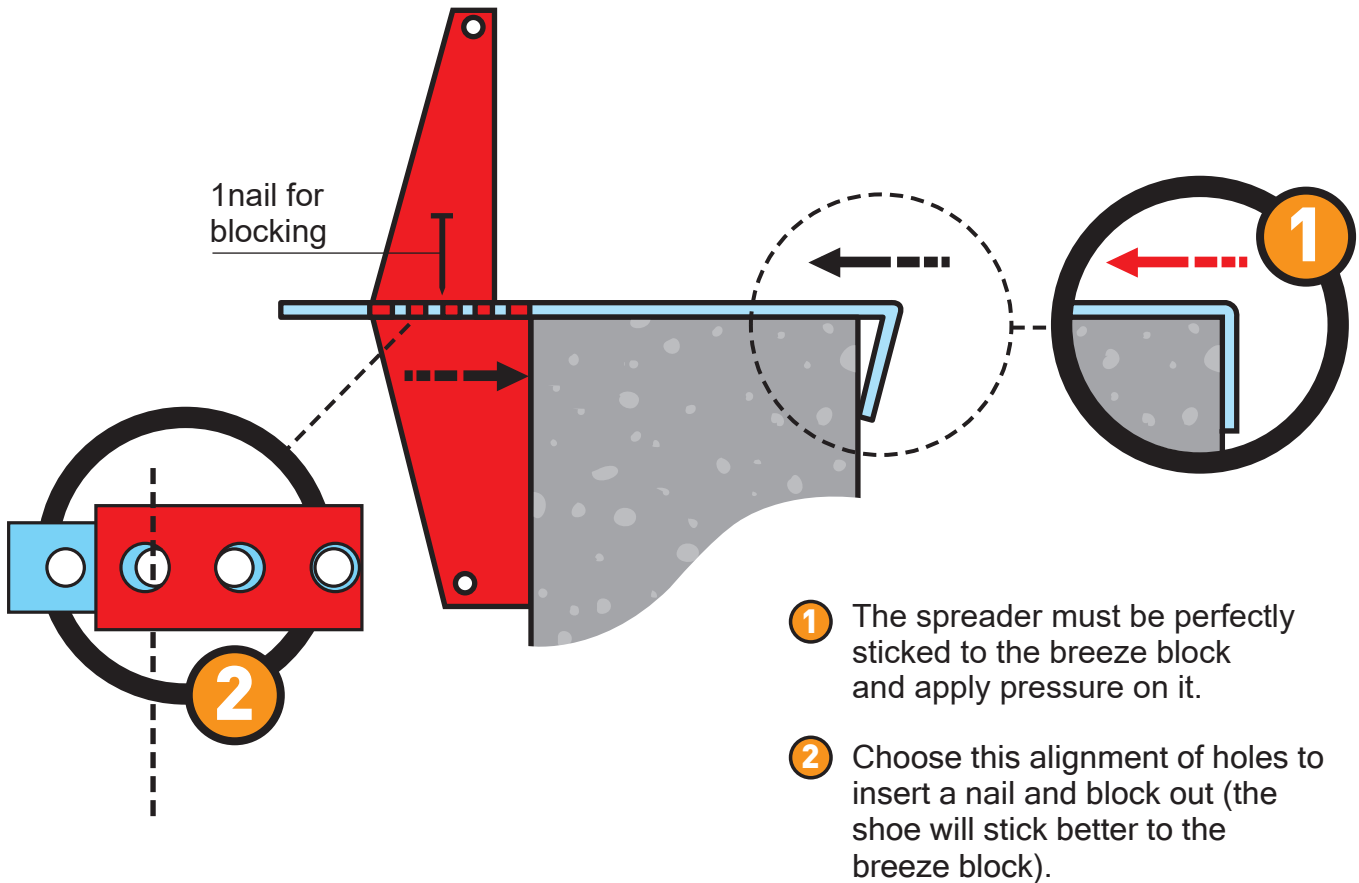

Our Aluminium spreaders respect the french standards concerning steel covering (no rust on your facades)

Our aluminium spreaders can be easily broken off behind the slab, on the hedge of the wall, after concrete pouring and form stripping.

We offer different spreaders for walls of :

15 / 20 / 25 cm

25 / 27 cm

30 cm

36,5 / 39 cm

Special dimensions can be made on demand.



SEB DIFFUSION

2, rue Lacour
42700 Firminy


Tél. 04 77 56 65 03

Fax : 04 77 10 97 25

Email: contact@systeme-croc.fr

RING BEAM AND SLAB FORMWORKS IN ONE OPERATION WITH THE OPTION "RPS CROC"

The "RPS" can easily be adapted on the shoes and allow the setting up of shuttering boards of different heights, from **30 to 50 cm**.

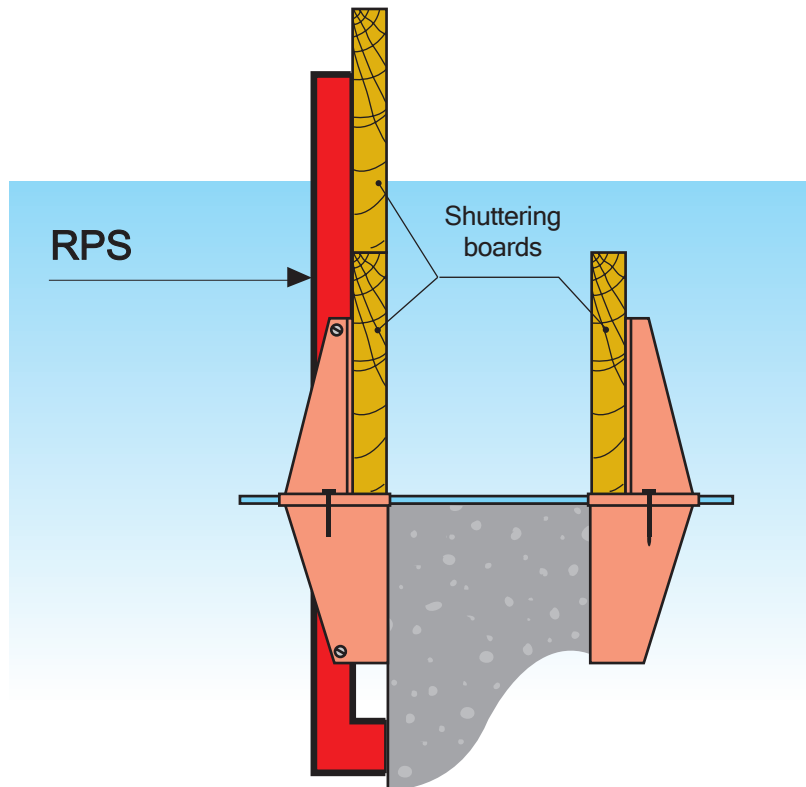

OPTION FOR SHUTTERING BOARDS THICKER THAN 27 MM (PDR 27)

